MADRIX LIGHTING CONTROL ORION



Quick Start Guide & Technical Manual

MADRIX[®] ORION – Quick Start Guide & Technical Manual

1st Edition — June 2018

Thank you for purchasing MADRIX® ORION!

Please read this guide carefully and thoroughly before using MADRIX® ORION. Make sure that you fully understand all information.

This MADRIX[®] ORION Quick Start Guide is written in English and German. (Diese Kurzanleitung wurde in englischer und deutscher Sprache verfasst.)

Developed and made in Germany

Imprint

inoage GmbH Wiener Straße 56 01219 Dresden Germany

Managing Directors: Christian Hertel, Sebastian Pinzer, Sebastian Wissmann

 Web
 www.madrix.com

 E-mail
 info@madrix.com

 Phone
 +49 351 862 6869 0

Copyright Information And Disclaimer

© 2018 inoage GmbH. All rights reserved. Information is subject to change at any time and without prior notice. Errors and omissions excepted. Reproduction, adaptation, or translation without prior written permission is prohibited. inoage GmbH does not grant guarantee on validity for a particular reason, the marketability, or other properties of the product. There is no way to assert a claim to inoage GmbH, neither in the legal way nor in other ways. inoage GmbH is not responsible for damages, including all disadvantages that are not just limited to the loss of sales, but that are caused due to the use of the product, due to the loss of serviceability of the product, due to misuse, happenings, circumstances, or actions that inoage GmbH does not have influence on, no matter if the damages as well as consequential damages are direct or indirect; whether they are special damages or others, nor if the damage is caused by the owner of the warranty or a third person.

Trademark Credits

 $Microsoft^{\circledast}$ and $Windows^{\circledast}$ are U.S. registered trademarks of Microsoft Corporation. Art-Net $^{\rm TM}$ – Designed by and Copyright Artistic Licence Holdings Ltd. All other products mentioned herein may be trademarks of their respective companies. MADRIX $^{\circledast}$ is a registered trademark of inoage GmbH.

Package Contents

1x MADRIX[®] ORION 1x Set of screw terminals (2x 6-pin and 1x 2-pin) 1x Power supply and world adapters kit 1x USB 2.0 cable *(certified)* 2x Wall-mount brackets 1x This quick start guide / technical manual

Please note: Check the package contents and the condition of the interface after unpacking! Contact your supplier if something is missing or damaged. Do not use the device if it seems to be damaged!

Safety Instructions And Limited Warranty

Two years of limited manufacturer's warranty are granted to the purchaser of this product. Warranty applies to constructional fault, material defect, or incorrect assembly the manufacturer has caused or is to be held responsible for. Warranty will be void if the interface is opened, modified, damaged through inappropriate handling and wrong usage, damaged through overvoltage, or damaged through any other cause.

Please follow the instructions below to avoid mishandling, damage to the device, or personal injury:



THE DEVICE WORKS WITH LOW VOLTAGE (DC 5 V - 24 V). Do not use any other voltage!

Beware that the interface works with electrical power. Only use the device in dry environments (indoor use). The IP Rating of the device is IP20. Do not use the interface in humid environments and avoid contact with water or any other liquids. Turn off the power if you are not using the device for a long time.

Avoid unwanted voltage on the cables at all times. Do not remove any parts from the unit or connect to an ungrounded circuit. Do not connect the unit to equipment that is switched on. Only connect the unit to equipment that is initially powered off.

There are no user serviceable parts inside or outside the interface. Repair service lies only within the responsibilities of the manufacturer. If the interface appears to be defective, please contact your dealer. After expiration of the warranty period you may contact your supplier or the manufacturer to have the unit repaired against payment of an individual service fee if possible.

The interface has several ports and slots. Only connect or insert devices, cables, and connectors to the individual ports and slots using connectors of the same type as the port. Do not use inapplicable equipment. This device should be used by professionals. The device is not designed to be operated by non-professionals or children.

End-Of-Life



This electrical device and its accessories need to be disposed of properly. Do not throw the device into normal trash or household waste. Please recycle packaging material whenever possible.

Usage

In general, this device is designed as a general-purpose input device for analog input and Ethernet-based output for remote control and interactivity. Do not use the interface for any other, deviating purpose. Directly connect to a wide range of compatible sensors, potentiometers, switches, and triggers. Easily create interactive projects using sensors for light, temperature, PIR, and many more. The device can be connected to and disconnected from USB or Ethernet network during use and without a reboot (Hot Swapping & Plug and Play). Multiple interfaces can be used at the same time.

Technical Specifications

DC 5 V $-$ 24 V, over A) 2-pin pluggable screw terminal with 500 mA max. load per port when supplying through		
to the ports (external power supply included),		
B) 5 V USB, C) Port 1 or Port 2		
AC Input: 110 – 240 V, 50/60 Hz, 0.6 A;		
DC Output: (3 V) / (4.5) / 5 V / 6 V / 7.5 V / 9 V / 12 V,		
2.0 A max.		
< 1.5 W during normal operation (300 mA max.)		
0 V – 12 V, analog		
2x ports (via 2x 6-pin pluggable screw terminals)		
2x 4 separate pins (8x in total)		
2x RJ45, Auto MDI-X, 10/100 MBit/s (compatible with		
1 GBit/s)		
USB 2.0, type B plug		
Non-conductive, IP20, UL94 V-0 flammability rating,		
designed for 35 mm DIN-rails or wall mounting		
92 mm x 70 mm x 45 mm (length x width x height)		
105 g 120 g incl. screw terminals and wall mounts		
-10 °C to 70 °C (Operating) \mid -20 °C to 85 °C (Storage)		
5 % to 80 %, non-condensing (Operating / Storage)		

IP Address And Other Device Information

You will find the following important information on the side of the device:

- Serial number ('Serial')
- Hardware revision ('Model')
- Default and preconfigured IP address ('Default IP') (See page 12 to reset the device to the default IP address if needed.)

Using A 3rd-Party Controller

 $\mathsf{MADRIX}^{\circledast}$ ORION is a standard network node for Art-Net or Streaming ACN. You can use the device with any compatible application, console, or controller.

Using The MADRIX[®] Software

The MADRIX[®] Software is a professional and advanced LED lighting control tool. It is recommended to use the MADRIX[®] Software in order to access all features of MADRIX[®] ORION, including the USB connection which requires MADRIX[®] 5. Support for Art-Net / Streaming ACN is already available with previous versions.

MADRIX[®] Minimum System Requirements And MADRIX[®] Supported Operating Systems

For the latest information, please check the website www.madrix.com

The minimum system requirements for the MADRIX® Software are as follows. Optimal system specifications will often be higher.

 2.0 GHz dual-core CPU, OpenGL 2.1 graphics card (NVIDIA recommended), 2 GB RAM, 1 GB free harddisk space, 1280 x 768 screen resolution, network card, sound card, USB 2.0

The MADRIX® 5 Software supports the following operating systems:

 Microsoft[®] Windows[®] 7 | 8 | 8.1 | 10 64 bit only

Please keep the system, drivers, and updates up to date.

Connectivity

5678



- 1) Power
- 2) Right Ethernet port, incl. 2 status LEDs
- 3) Left Ethernet port, incl. 2 status LEDs
- 4) USB port
- 5) Status LED for Power
- 6) Status LED for USB
- 7) Status LED for Port 1
- 8) Status LED for Port 2
- 9) Port 1
- 10) Reset button
- 11) DIN-rail unlocking clip
- 12) Port 2

Please note:

The package contents do not include network cables or input equipment.

2x Mounting brackets:



1) Connecting Your Input Equipment

See chapter 'Connection Diagram Examples' on page 8 for more information.

- Step 1) Completely switch off your supply of power before connecting your input equipment to the device!
- Step 2) Connect your input equipment to the provided 6-pin screw terminals:
- » You may connect only to Port 1, only to Port 2, or to Port 1 and Port 2.
- » For each pin, connect GND (GROUND) and V+ to the same port as the pin.
- » Pay attention where to connect GROUND, DATA, and V+; as indicated on the device as well as required by the diagram.
- » Insert each individual wire consecutively and tighten the corresponding screw with a suitable screw driver.
- Step 3) Plug the 6-pin screw terminals into the device. The screws must face upwards.
- Step 4) Continue with the chapter '2) Connecting To Power And Data' below.

2) Connecting To Power And Data

See chapter 'Connection Diagram Examples' on page 8 for more information.

- Step 1) Be careful when handling the device and electrical power! Completely switch off your supply of power before connecting to the device!
- Step 2) Connect your power cables to the provided 2-pin screw terminal:
- » Pay attention where to connect + and -; as indicated on the device.
- » Insert each individual wire consecutively and tighten the corresponding screw with a suitable screw driver.

Plug the 2-pin screw terminal into the device. The screws must face upwards. Alternatively, use the provided external power supply. Make sure to switch to 5 V (yellow arrow) on the power adapter itself by using a suitable tool (up to 12 V or when using your own power supply up to 24 V). You can also supply 5 V power over USB.

- Step 3) Connect to USB or to Ethernet network to send data as required.
- Step 4) Do not switch on your supply of power until all required power cables are connected to MADRIX® ORION.
- Step 5) Continue by configuring your device as described in chapter '3) Device Configuration' on page 11.

en 8

Daisy-Chain Support

MADRIX[®] ORION features 2 separate Ethernet network ports. Either one is fully functionally for IN and OUT and can be used for the data connection without using a separate network switch or router. It is recommended to connect a maximum of 8 units after one another in a row.



Connection Diagram Examples

You can connect your input equipment, MADRIX® ORION, supply of power, and data cables in different ways. The following pages show several examples. These schemes are to be seen independently of the direction, position, and mounting method. Please see page 6 and page 7 for further information.



SUPPLY POWER TO ORION ONLY ONCE! DO NOT CONNECT V+ Multiple times by connecting it via port 1/2 and power.

Legend

Connection required for GROUND. Connection required for DATA. Connection required for V+.

Example A



Description: Power is supplied only once to ORION and also used for the input equipment. Each Port is protected with 500 mA max. For example, a potentiometer is connected to Port 1 via GROUND, DATA at Pin1, and V+, while a switch is connected to Port 2 via DATA at Pin 5 and V+.



Description: Power is supplied only once to ORION and also used for the input equipment. Each Port is protected with 500 mA max. To Port 1, a PNP output sensor is connected over 0 V - 12 V. To Port 2, an NPN output sensor with an open collector is connected plus a $1k \Omega - 10k \Omega$ resistor.



Description: Power is supplied to ORION and supplied separately to the input equipment. The sensor is connected to Port 1 via GROUND and DATA at Pin 1, but <u>not</u> V+!



Description: 5 V - 24 V power is supplied externally and to all input equipment. For example, a sensor is connected to Port 1 via GROUND, DATA at Pin1, and V+ to supply power to ORION once, while a second sensor is connected to Port 2 via GROUND and DATA at Pin 5, but <u>not</u> V+!

Voltage Characteristic Examples

INPUT EQUIPMENT	VOLTAGE CHARACTERISTICS	ORION PIN INPUT SETTINGS
Resistor		Analog
		Analog
Trigger / Switch		Digital
Propellor		Counter

How To Update The Firmware

It is highly recommended to update the firmware of MADRIX[®] ORION should a new firmware version become available. You can do so in different ways. Follow these quick steps to update the firmware in the MADRIX[®] Software over USB:

- Step 1) Connect MADRIX® ORION to your computer over USB.
- Step 2) Start the MADRIX[®] Software.
- Step 3) In the MADRIX[®] Software, go to 'Tools...' > 'MADRIX Device Configuration...'. A new window will open. Click on the search button (loupe icon) and the software will search for connected devices. Select your device in the list, click on the 'Firmware' button, and follow any instructions.

For more information, please read the MADRIX® 5 user manual.

3) Device Configuration

You can access and change specific device settings, including the IP address, Pin Input, DMX Channels, and Network Output, in different ways.

Please note: In order to put MADRIX[®] ORION fully into operation, please configure the device according to your requirements and input equipment.

Web Configuration Through A Web Browser

- Step 1) Connect MADRIX[®] ORION and your computer to the same network.
- Step 2) Assign correct network settings in the Windows operating system. (Recommended: IP address 10.0.0.1 / Subnet mask 255.0.0.0)
- Step 3) Open your web browser and enter the IP address of MADRIX® ORION. (You can find the default IP address on the side of the ORION device.)
- Step 4) The built-in web configuration page will be launched. Confirm or change the IP address, Pin Input, DMX Channels, and Network Output. The device then sends out data over network as configured.
- Step 5) Change any other settings as required. Apply changes with 'Set'.

MADRIX Device Configuration In The MADRIX® Software

- Step 1) Connect MADRIX® ORION to your computer via USB or via Ethernet.
- Step 2a) For the USB connection, Microsoft[®] Windows[®] will install the interface drivers automatically. When ready, the status LED for USB will fade between red and green; as described on page 12. Start the MADRIX[®] Software and enable USB drivers. Go to 'Preferences' > 'Options...' > tab 'Devices USB'. Activate 'MADRIX ORION' and click 'OK'. (The driver is activated by default.)
- Step 2b) For the Ethernet connection, enable network drivers in MADRIX[®]. Go to 'Preferences' > 'Options...' > tab 'Devices Network'. Activate 'inoage - MADRIX' and click 'OK'. (The driver is activated by default.)
- Step 3) In MADRIX[®], go to 'Tools...' > 'MADRIX Device Configuration...'. A new window will open. Click on the search button (loupe icon) and it will search for connected devices. Select your device in the list and click on the configuration button (gear wheel icon).
- Step 4) Confirm or change the IP address, Pin Input, DMX Channels, and Network Output and any other settings as required. Apply changes with 'Set'. The device then sends out data over network as configured.

Description Of Status LED Codes

STATUS	STATUS LED POWER		
Powered off	Power not connected. \rightarrow The device has no power.		
Permanently green	Connected to power. \rightarrow The power is on.		
Blinking green	Bootloader activated. \rightarrow Reset device / upload firmware.		
STATUS	STATUS LED USB		
Powered off	USB not connected.		
<mark>Red</mark> + blinking green	Communicating over USB. \rightarrow Sending or receiving data over USB. The USB port works.		
Fading between red + green	Connected to USB; Drivers installed correctly. \rightarrow No data is sent over USB.		
Orange	Connected to USB; No drivers installed. \rightarrow Reinstall software and drivers or try a different USB port.		
STATUS	STATUS LED PORT 1	STATUS LED PORT 2	
Powered off	No data is sent.	No data is sent.	
Blinking green	Receiving data / changes. → The input port works.	Receiving data / changes. → The input port works.	
STATUS	STATUS LEDS ETHERNET PORTS		
Green off	10 MBit/s connected.		
Green on	100 MBit/s connected.		
Orange on	Network connected.		
Orange blinking	Sending or receiving data. \rightarrow The Ethernet port works.		

Reset To Factory Default Settings

In rare cases, you might need to do a reset to factory default settings:

- Step 1) Disconnect all connections from the device (power, data, input).
- Step 2) Use a suitable tool to press the reset button (between Port 1 and 2).
- Step 3) Continue to press the reset button and supply power again over 'Power' or over USB.
- Step 4) Continue to press the reset button and wait until <u>all</u> status LEDs of the device flash repeatedly or wait 10 seconds.

Please note: Simply repeat these steps should the process fail.

How To Install On DIN-Rails



Mounting (Pictured Left)

- Step 1) Hook the device in an angle onto the upper edge of the rail.
- Step 2) Pull the unlocking clip.
- Step 3) Press the lower part of the device against the rail and let the clip snap into position.

4

Unmounting (Pictured Right)

- Step 1) Pull the unlocking clip.
- Step 2) Lift the lower part of the device from the rail in an angle.



Using The MADRIX[®] Software

You can mainly use 3 operating modes together with the MADRIX® Software:

- DMX-IN Via Art-Net
- DMX-IN Via Streaming ACN
- DMX-IN Via USB

In the MADRIX® Software, make sure to activate the correct drivers first:

- For USB, go to 'Preferences' > 'Options...' > 'Devices USB'
- For sACN, go to 'Preferences' > 'Options...' > 'Devices Network'
- For Art-Net, go to 'Preferences' > 'Device Manager...' > 'Art-Net'

Then, configure your devices and activate input in order to receive the data:

- Go to 'Preferences' > 'Device Manager...' > 'DMX Devices'
- Go to 'Preferences' > 'Device Manager...' > 'DMX Input'

For more information, please read the MADRIX® 5 user manual.

13 en

Updates And Further Information

Digital documentation files are automatically installed with MADRIX[®]. More information about the software and how to connect MADRIX[®] ORION is provided in the **MADRIX[®] 5 Help And Manual**. You can access this user manual by pressing 'F1' on your keyboard while using the MADRIX[®] Software, by navigating to the menu 'Help' > 'User Manual...', or online at help.madrix.com

The latest quick start guide and MADRIX® Software, including drivers, firmware updates, and documentation, are available from www.madrix.com

Support

In case of further questions concerning handling of MADRIX® ORION or technical problems, please read the MADRIX® Help And Manual first, contact your dealer, or have a look at the website www.madrix.com You can also directly contact info@madrix.com

CE And RoHS Declaration Of Conformity

CE RoHS The device complies with the requirements set forth in the council Directive of the law of the Member States relating to electromagnetic compatibility (2014/30/EU), the Low Voltage Directive (2014/35/EU), and the Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment (2011/65/EU) (RoHS). Compliance with these has been evaluated in acc. with the following standards: DIN EN 55011 (2009) + A1 (2010), DIN EN 55015 (2013), DIN EN 55024 (2010), DIN EN 61000-4-2 (2009), DIN EN 61000-4-3 (2006) + A1 (2008), DIN EN 61000-4-4 (2013), DIN EN 61000-4-6 (2014).

FCC Declaration Of Conformity

FC The device has passed the following tests of compliance: FCC (2016) - Title 47, Part 15, class A, Radio frequency devices.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Frequently Asked Questions (FAQs)

What do the blinking LEDs on the device mean?

Please read the chapter 'Description Of Status LED Codes' on page 12.

How can I change the IP address?

You can use the built-in web configuration page as described on page 11.

The current IP address cannot be reached. What can I do?

You could perform a reset to factory default settings as described on page 12.

Does the device support RDM?

No. RDM is not supported by MADRIX® ORION at this time.

Is it possible to use more than one MADRIX® ORION?

Yes. Art-Net or Streaming ACN is recommended for large projects by connecting multiple devices to a switch (1 GBit/s) via suitable components to create a network or use the built-in daisy-chain support (see page 8).

Where can I find the latest firmware update?

The latest MADRIX® Software also includes the latest firmware (see p. 10).

Can I use other receivers apart from the MADRIX® Software?

Yes. When using MADRIX $^{\otimes}$ ORION as a standard network node, you can use it in combination with other compatible software applications, consoles, and controllers.

Can I repair MADRIX® ORION myself?

No. Do not attempt any repairs. Any attempt will void your warranty (see p. 3)!

What can I do if my unit does not work anymore?

Please contact your dealer or supplier if the device seems to be defective.