

Rail-Split DMX

User Guide

Please read these instructions before using the product.

This product has been designed & manufactured for professional use only. It should only be installed by a suitably qualified technician and in accordance with electrical regulations in the country of use.

Unless directed in the instructions there are no user serviceable parts inside the outer case of this product.

Always disconnect from the power supply when not in use.

Any specific IP rating, where appropriate, is given in the instructions. Unless otherwise stated this product is designed for indoor use only. If used outdoors it MUST be installed in an appropriate IP rated cabinet. Do not allow this product to be exposed to rain or moisture. Do not allow liquid to penetrate the product.


Please recycle all packaging.

Copyright © Artistic Licence Engineering Ltd. All rights reserved.

Download the user guide by scanning the following QR code:




Connections

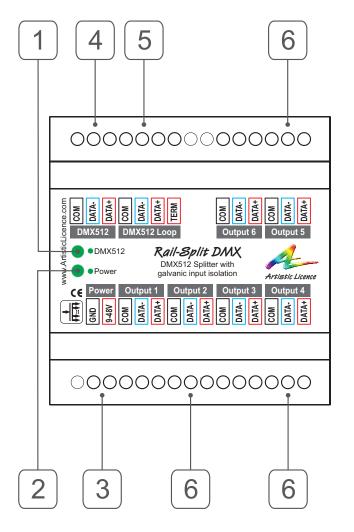



Reference	Туре	Description
1	LED	Data Activity
2	LED	Power
3	Connection	Power Input
4	Connection	DMX512 Input
5	Connection	DMX512 Loop & Term**
6	Connection	Splitter Outputs

** A passive loop-through connection allows onward connection to other DMX512 devices. If this feature is not required then the signal must be terminated. The product contains an internal termination resistor. This is enabled by fitting a wire link between Term and DAT+.

Mounting Diagram

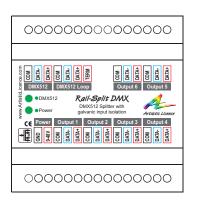

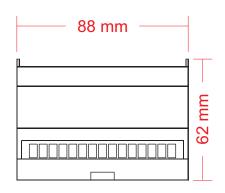

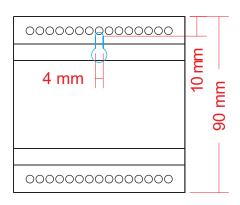

DMX512 Wiring

XLR Pin (Convention)	Function	Colour
1	Ground	Black
2	Data -	Blue
3	Data +	Red

Overview

Rail-Split DMX is a uni-directional DMX512 splitter and distribution amplifier. By design, Rail-Split DMX does not support RDM, allowing a cost-saving to be passed on to those customers who do not require bi-directionality. Customers requiring RDM functionality should order the sister product, Rail-Split RDM, as opposed to Rail-Split DMX.

Key features

- Input Optical Isolation
- Six independent outputs
- Uni-directional outputs
- DMX512-A compatible
- Surface mount or DIN rail mounted

Connections

Input

The DMX512 input is attached via three screw terminals. Please refer to the connections diagram.

Loop-through

A passive loop-through connection allows onward connection to other DMX512 devices. If this feature is not required then the signal must be terminated. The product contains an internal termination resistor. This is enabled by fitting a wire link between the screw terminals that will terminate the DMX line (Term and DAT+).

Output

Six DMX512 outputs are provided. Each output is capable of driving 32 additional DMX512 devices. It is not necessary to terminate any outputs that are not connected. However, a terminator must be connected to the final DMX512 device.

Internal Earth and Isolation


The following table summarises the internal earth interconnection and isolation.

Please note that we use the term Earth-Ground to avoid international confusion. In Europe Earth-Ground is called Earth; in the USA, Earth-Ground is called Ground.

Circuit	Description	
DMX512 Input	Type:	Isolated
(including Loop Through)	Pin 1:	Connects to internal isolated
		circuit. No connection to
		Internal Logic Ground
DMX512 Outputs	Туре:	Ground referenced
	Pin 1:	Connected to Internal Logic
		Ground
Internal Logic Ground	Connects to Ground Power Input	

Application Diagram

The diagram below shows how Rail-Split DMX could be utilised in a typical application.

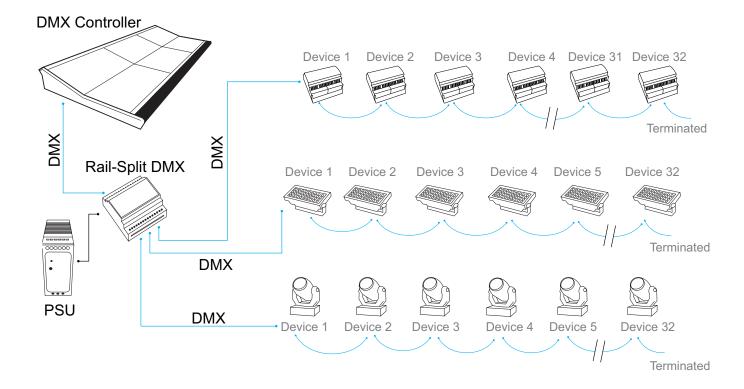


Operation

All six outputs provide identical copies of the received DMX512. Each output can drive an additional 32 devices.

LED Indication

The indicators have the following meaning:

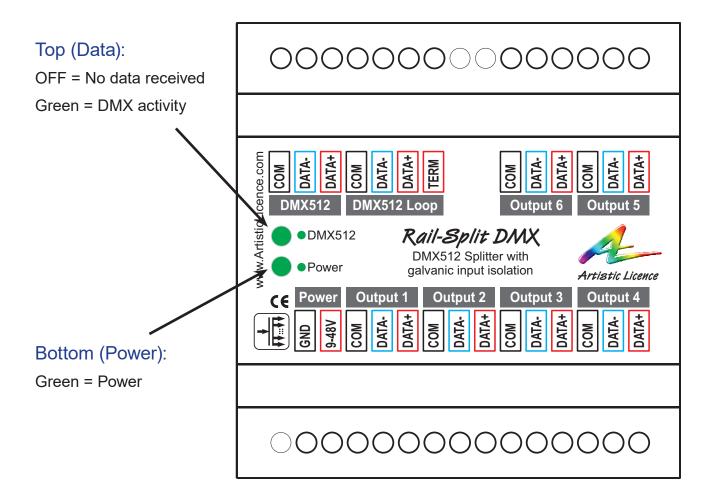

Rail-Split DMX Specification

Mechanical

- Housing: DIN rail case
- Material: Lexan Plastic UL94-V0 rated
- Overall dimensions: 90 mm (H) x 88 mm (W) x 62 mm (D)
- Weight: 0.25 kg
- Mounting: 35 mm DIN rail or surface mount
- Country of manufacture: UK

Environmental

- Operating temperature: 0°C to 40°C
- Storage temperature: -10°C to +50°C
- Operating relative humidity (max): 80% noncondensing
- IP rating: IP20 indoor use only
- Certification: CE, WEEE, RoHS
- Warranty: 2-year (return to base)

Power & Electrical

- Input voltage: 9-48 VDC
- Input connector: 2-pin screw terminal (1 no.)
- Input power (max): 8 W
- Duty cycle: 80% @ 25°C
- DC fuse: internal resettable fuse for control electronics

DMX512 Outputs

- Output mode: ground referenced
- Output isolation: n/a
- Output ESD protection: 10 kV
- Output voltage protection: +/- 10 V

DMX512 Input

- Input mode: Optically isolated
- Input isolation: 1 kV
- Input ESD protection: 12 kV
- Input voltage protection: +/- 80 V

Control

- Input Protocols: DMX512, DMX512 (1990), DMX512-A
- Output Protocols: Same as input

Data Connections

- 3-pin Screw Terminal DMX Input (1 no.)
- 3-pin Screw Terminal DMX Loop (1 no.)
- 3-pin Screw Terminal DMX Output (6 no.)

LED Indication

Power / DMX

Package Contents

- Rail-Split DMX
- User guide

Ordering Info

• Product code: Rail-Split DMX

Accessories (not included)

• PSU-9-1.5-FER

Compliance

All Products manufactured or sold by Artistic Licence Engineering Ltd are fully compliant with the appropriate CE, FCC, and RoHS regulations. Product specific information is available on request.

Waste Electrical & Electronic Equipment (WEEE)

Artistic Licence is a member of a WEEE compliance scheme and will happily recycle any of our products that you, at your expense, return to us.

CE Compliance



Rail-Split DMX is CE compliant when installed in a shielded and earthed metal case

Warranty

All products are covered from date of purchase by a two-year return to base warranty.

By return to base, we mean that the customer is responsible for all costs of transport to and from Artistic Licence.

Returns will not be accepted without prior authorisation. In order to discuss a request to return goods, please email:

Sales@ArtisticLicence.com



Artistic Licence

Studio 1, Spectrum House 32-34 Gordon House Road London NW5 1LP United Kingdom

Telephone +44 (0) 20 8863 4515 Fax +44 (0) 20 8426 0551

Email: Sales@ArtisticLicence.com
Web: www.ArtisticLicence.com

Customer support and knowledge base: www.ArtisticLicence.com/support.html

Due to our policy of continuing product improvement specifications are subject to change without notice