
Manual

V1.1 - October 2024





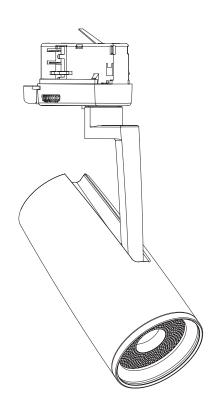

DRIVER DRIVER

R D DMX

Local Dim Roto Dim

Bluetooth Wireless by Casambi DMX

dimmable dimmable by Casambi

Index	2	Installation Global	4	Dim Methods	8
Safety information	_2	Installation Bolt	<u>5</u>	Programming	9
Content	_2	Lock Position	<u>5</u>	Programming table	10
<u>Technical</u>	3	Lens change	6	Accessories	11
Specifications	3	Accessory assembly		List of symbols	12

SAFETY INFORMATION











Disconnect the power supply before installing or maintaining

Make sure all connectors are connected properly


Use a source of AC power that complies to local electrical codes Block access below the work area when maintaining the unit

Don't modify or install genuine parts on this product

Don't install in a flammable or explosive area

Warning! Some surfaces can be hot

CONTENT

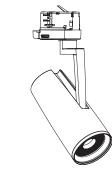










DINX DINX CE TO THE STATE OF TH


TECHNICAL

INSTALLATION GLOBAL


Topaz Profile

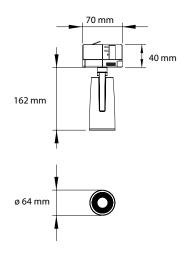

Casambi adapter

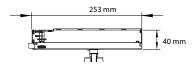



DMX adapter

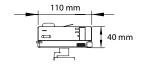



Bolt Mounting




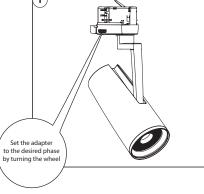


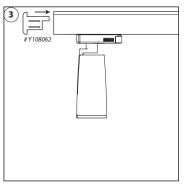


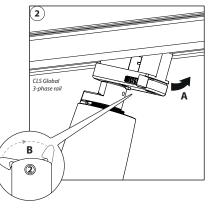

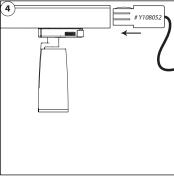

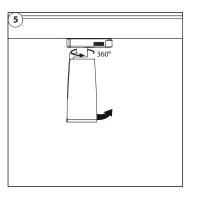

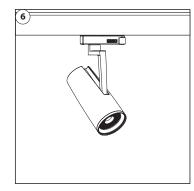

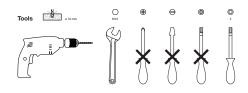

SPECIFICATIONS

LED: Bridgelux or Xicato

Available colours: CRI>90 : 2700K, 3000K, 3500K & 4000K

CRI>98: 2700K, 3000K, 3500K & 4000K

Optics: 12°, 14°, 25, 35° or 55°

Power supply: 100 ~ 240 VAC (Roto Dim, DMX, W-DMX)

200 ~ 240 VAC (Non Dim, Local Dim)

220 ~ 240 VAC (Casambi)

Power consumption: Max. 15 Watt

Housing: Black or white coated aluminium

Weight: 780 gr
IP value: IP20
Measurements: See drawing
Ambient temperature: -10° C till +40° C


3








INSTALLATION BOLT


LENS CHANGE

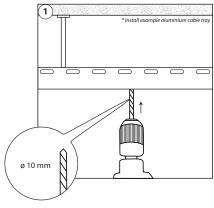


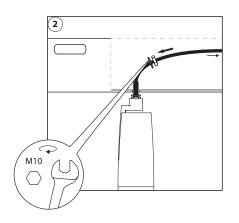


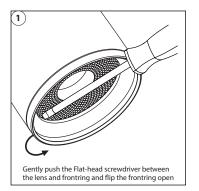

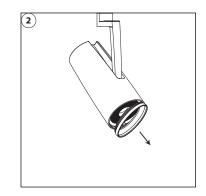


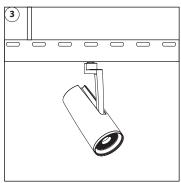


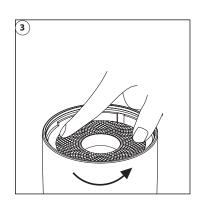

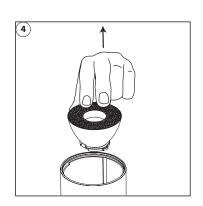



LOCK POSITION

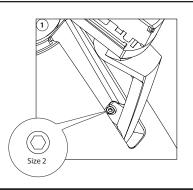

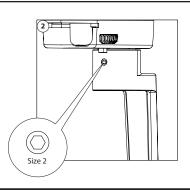

5

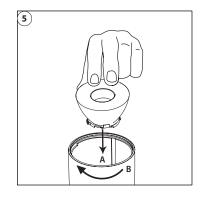


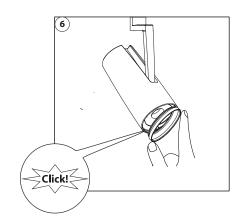






ACCESSORY ASSEMBLY


DIM METHODS

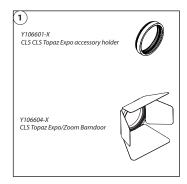


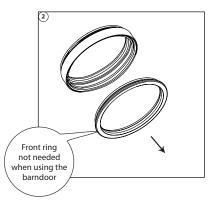


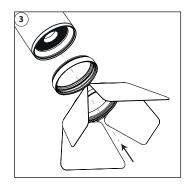

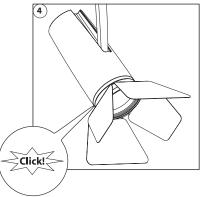

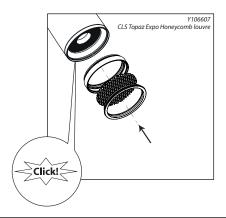


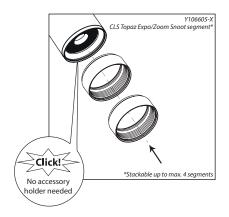

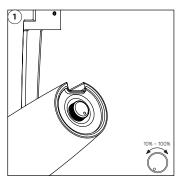


Local Dim

Local dimming through a potentiometer on the driver housing.

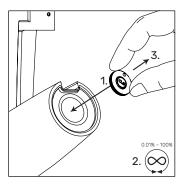

Roto Dim®

- 1. Place magnet on the back of the Topaz.
- Turn right or left for the desired dimming value.
- Remove the magnet from the Topaz. After aprox. 3 seconds the LED will flash one time, confirming the dim value has been stored.
- The magnet can also remain seated on the back of the Topaz.
 After aprox. 10 seconds the LED will flash one time, confirming the dim value has been stored.

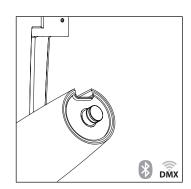

Wireless (antenna)

Control by Casambi via bluetooth or Wireless DMX





7


PROGRAMMING

PROGRAMMING TABLE

All settings can be configured via DMX. Settings can be configured at once or separately. When one or a couple settings needs to be changed just leave all other setting values zero. This keeps those settings unchanged. Please check the table for more information.

Always use a DMX controller with digital interface. If not available, you can purchase the CLS D-ta DMX addresser unit (#122200).

First make sure to set the DATA on the DMX controller. To program the setting into the LED fixture follow the next steps.

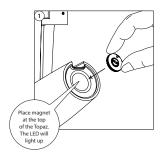





^{*} If the LEDs flashes 10 times, something went wrong. Please try again. If the problem continues to occur, please contact your local sales distributor.

WIRELESS DMX

See the Manual of Wireless Solutions. The Manual can be found on our CLS website, in the Downloads section. Or use the link below https://www.cls-led.com/wp-content/uploads/cls-files/W-DMX-manual.pdf

Unlink procedure

When the fixture does not receive a DMX signal (DMX controller off), place the magnet on the bottom of the fixture for 5 seconds. Slow flash indicates that the fixture is unlinked.

BLUETOOTH BY CASAMBI

For Casambi controlled fixtures, see the manual of Casambi. The Manual can be found on our CLS website, in the Downloads section.

Or use the link below:

9

https://www.cls-led.com/wp-content/uploads/cls-products/CLS_CASAMBI/MANUAL/Manual_Casambi_controlsystem_EN.pdf

PROGRAMMING TABLE							
DMX	Function	Data	Parameters	Description			
CH1	Set address 001 to 255	0	0 = no change	Use this DMX channel to set address			
		1255	DMX address = 1255	from 1 to 255.			
I CHO I	Set address	0	No change	Use this DMX channel to set address			
	256 to 508	1255	DMX address = 256508	from 256 to 508			
CH3	Static behavior	0	No change				
		1	Last DMX value	If no DMX is present the fixture will respond like set in this function.			
		2	Output off				
		3	Load static values				
		0	No change	When dynamic softdim is activated an			
		1	Off	extra DMX channel behind the colours			
CH4	Soft dim	2	Standard	and/or master controls the soft dim			
OTH	oon ann	3	Dynamic delay	reaction. If fixed no extra DMX channel			
		5-255	Fixed delay	is used. Value x delay is x*0.1 seconds, varying from 0.1-25.5 seconds.			
	Static output	0	No change	Each output channel can be set to a			
		1	Output off	static intensity.			
CH10		2255	Intensity 2255	If no DMX is present and Static behavior is set to "load static values". The outputs will be set to the configure intensity values.			
CH14	Load default settings	0	No change	This function resets all settings to the			
		1	Load Factory settings	Factory setting.			
	DMX control	0	No change	The intensity control of the output via			
CH17		2	Disable	DMX can be disabled. To enable it again use RDM or power cycle with magnet in place. Wait until flash sequence and remove the magnet.			





ACCESSORIES

LIST OF SYMBOLS

ACCESSORIES

Y110855	CLS 3-phase multi adapter grey XTSA 68
Y110865	CLS 3-phase multi adapter white XTSA 68
Y110875	CLS 3-phase multi adapter black XTSA 68
Y110880	CLS T-connector grey for 3-phaserail, ground left
Y110881	CLS T-connector black for 3-phaserail, ground left
Y110882	CLS T-connector white for 3-phaserail, ground left
Y110925	CLS 3-phase rail 1mtr aluminum XTS 4100
Y110926	CLS Global 3-phase rail 2 metre aluminum XTS 4200
Y110927	CLS Global 3-phase rail 2mtr black XTS 4200
Y110928	CLS Global 3-phase rail 3mtr aluminum XTS 4300
Y110929	CLS Global 3-phase rail 4mtr aluminum XTS 4100
Y110930	CLS Global 3-phase rail 3mtr white XTS 4300
Y110931	CLS Global 3-phase rail 3mtr black XTS 4300
Y110932	CLS Global 3-phase rail 4mtr black XTS 4400
Y110935	CLS end piece for 3-phase rail grey XTS 41
Y110938	CLS end piece for 3-phase rail black XTS 41
Y110939	CLS end piece for 3-phase rail white XTS 41-3
Y110945	CLS connection box for 3-phase rail, grey XTS 11
Y110946	CLS connection box for 3-phase rail, grey XTS 12
Y110950	CLS connection box for 3-phase rail black XTS 11
Y110954	CLS L-connector grey for 3-faserail, ground left

Y110954	CLS L-connector grey for 3-faserail, ground left
Y110955	CLS L-connector grey for 3-faserail, ground right
Y110960	CLS connect piece gray (connect rail-rail) XTS
Y110961	CLS connect piece white (connect rail-rail) XTS21
Y110962	CLS connect piece black (connect rail-rail) XTS
Y110965	CLS hanging bracke for 3-phase rail, grey SKB16
Y110966	CLS hanging set, grey SKB12 with 1.5 mtr steel
Y110970	CLS bending tool XTSV 12
Y110980	CLS round mountingdisk GA70 grey
Y110985	CLS round mountingdisk GA70 white
Y110990	CLS round mountingdisk GA70 black
Y106601-B	CLS Topaz Expo accessory holder black
Y106601-W	CLS Topaz Expo accessory holder white
Y106603-B	CLS Topaz Expo/Zoom Snoot segment 20mm black
Y106603-W	CLS Topaz Expo/Zoom Snoot segment 20mm white
Y106604-B	CLS Topaz Expo/Zoom Barndoor black
Y106604-W	CLS Topaz Expo/Zoom Barndoor black
Y106605	CLS Topaz Expo filterholder
Y106606	CLSTopaz EXpo Oval beam shaper set
Y106018	CLS Roto Dim magnet



2024 CLS-LED BV. All rights reserved. Information subject to change without notice, CLS-LED BV and all affiliated companies disclaim liability for injury, damage direct or indirect loss, consequential or economic loss or any other loss occasioned by the use of, inability to use or reliance on the information contained in this manual. No part of this manual may be reproduced, in any form or by any means, without permission in writing from CLS-LED BV. Other legal information can be found in our General conditions, found on the back of your CLS-LED BV invoice, inside the CLS catalogue or on our website www.cls-led.com/General-Terms.pdf



 \bigcirc

Ö

0

J.

DRIVER DRIVER

INCLUDED EXTERNAL









indicated in degrees

Multiple connection

Installation depth

In centimeters

Installation size

Cable length

Maximum cable attached to the fixture in centimeters

Inclusive or exclusive

Pressure Maximum pressure on the

Of the light source in hours

Performance Zoom

Adjustable beam angle

LEDs Kind of LED used in the

Plug & play
Easy connection using the

IP value Ingress Protection classifies the

degrees of protection provided against the intrusion of the product

SmartConnect system

Colour changing RGB, RGB-W, RGB-A.

fixture

fixture in kg/cm²

Internal or external

Weight

Lenses

Daisychain connectivity

Swivel Fixture is horizontally rotatable,

Fixture is vertically rotatable, indicated in degrees









Cutting length

Indicated by the cutting marks

Pitch between the LEDs

Amber, blue, red or green

Retail & Food LED modules Clothing, furniture, kitchens, jewellery, shoes, bread, meat, fish and































PWM dimming Traditional PWM dimming, DMX analog or DMX Hybrid dim







C€







protocol or Wireless DMX

Magno dimming















Lightsource Equipped with a CLS. Bridgelux or a Xicato LED module





