
Manual

V1.1 - October 2024



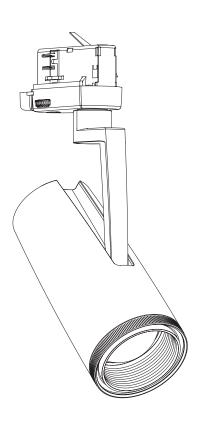

DRIVER DRIVER INCLUDED INTERNAL

DMX | CASAMBI | CASAMBI | DMX | Wireless | DMX | Wireless | DMX |

R D DMX dimmable

Local Dim Roto Dim

Index	2
Safety information	2
Content	2
Technical	- 3
Specifications	-

Installation Global	4
Installation Bolt	<u>5</u>
Kit assembly	6
Accessory assembly	
Dim Methods	8

Programming	9
Programming table	10
Accessories	11
List of symbols	12

### **SAFETY INFORMATION**











Disconnect the power supply before installing or maintaining

Make sure all connectors are connected properly

Use a source of AC power hat complies to local electrical codes

Block access below the work area when maintaining the unit


Don't modify or install genuine parts on this product Don't install in a flammable or explosive area

Warning! Some surfaces can be hot

### CONTENT





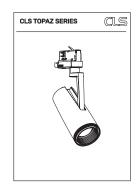






CE AT XICATO bridgelux

# **TECHNICAL**


# **INSTALLATION GLOBAL**

#### Topaz Profile

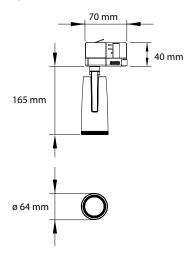


Tools 0 10 mm

#### Casambi adapter

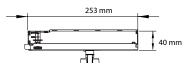

#### DMX adapter

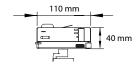



#### **Bolt Mounting**










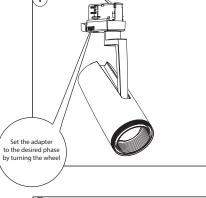


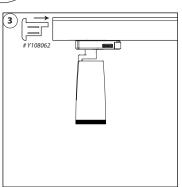


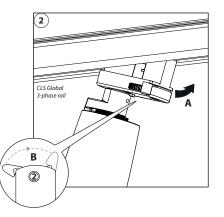

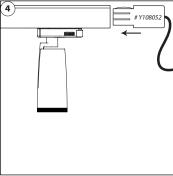

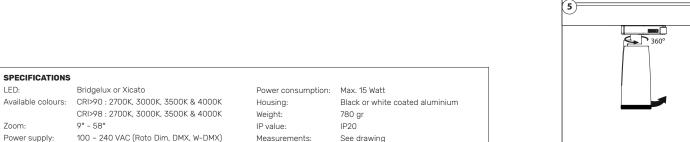

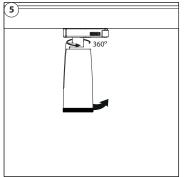

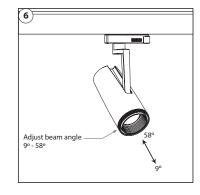

LED:

200 ~ 240 VAC (Non Dim, Local Dim) 220 ~ 240 VAC (Casambi)





Ambient temperature: -10° C till +40° C


3


# **INSTALLATION ZOOM BOLT**


# KIT ASSEMBLY

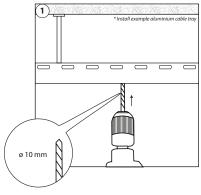


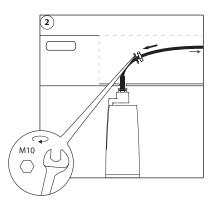

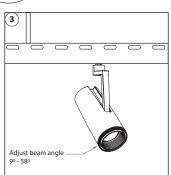


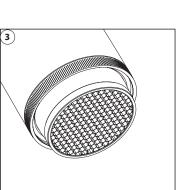


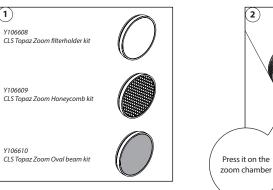

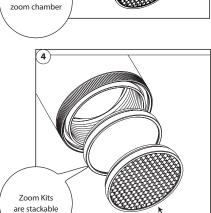

**LOCK POSITION** 

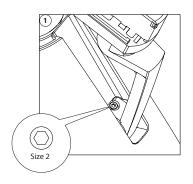

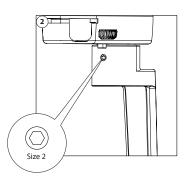






5


## **ACCESSORY ASSEMBLY**


## **DIM METHODS**

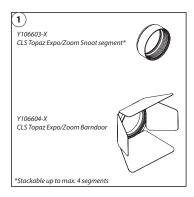

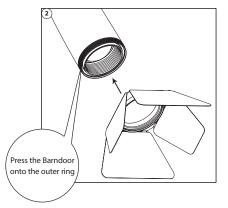

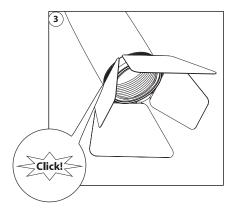


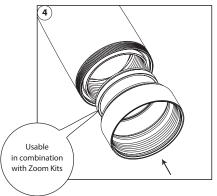

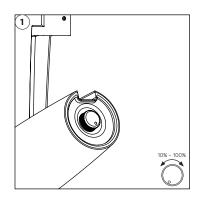

#### Local Dim

Local dimming through a potentiometer on the driver housing.

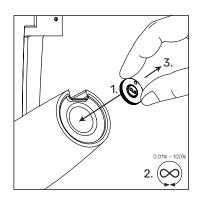

#### Roto Dim®

- Place magnet on the back of the Topaz.
   Turn right or left for the desired
- dimming value.
- 3. Remove the magnet from the Topaz. After aprox. 3 seconds the LED will flash one time, confirming the dim value has been stored.
- 4. The magnet can also remain seated on the back of the Topaz. After aprox. 10 seconds the LED will flash one time, confirming the dim value has been stored.



#### Wireless (antenna)

Control by Casambi via bluetooth or Wireless DMX





7


### **PROGRAMMING**

### PROGRAMMING TABLE

All settings can be configured via DMX. Settings can be configured at once or separately. When one or a couple settings needs to be changed just leave all other setting values zero. This keeps those settings unchanged. Please check the table for more information.

Always use a DMX controller with digital interface. If not available, you can purchase the CLS D-ta DMX addresser unit (#122200).

First make sure to set the DATA on the DMX controller. To program the setting into the LED fixture follow the next steps.

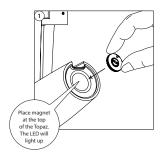





<sup>\*</sup> If the LEDs flashes 10 times, something went wrong. Please try again. If the problem continues to occur, please contact your local sales distributor.

### **WIRELESS DMX**

See the Manual of Wireless Solutions. The Manual can be found on our CLS website, in the Downloads section. Or use the link below https://www.cls-led.com/wp-content/uploads/cls-files/W-DMX-manual.pdf

#### Unlink procedure

When the fixture does not receive a DMX signal (DMX controller off), place the magnet on the bottom of the fixture for 5 seconds. Slow flash indicates that the fixture is unlinked.

### **BLUETOOTH BY CASAMBI**

For Casambi controlled fixtures, see the manual of Casambi. The Manual can be found on our CLS website, in the Downloads section.

Or use the link below:

9

https://www.cls-led.com/wp-content/uploads/cls-products/CLS\_CASAMBI/MANUAL/Manual\_Casambi\_controlsystem\_EN.pdf

PROGRAMMING TABLE				
DMX	Function	Data	Parameters	Description
CH1	Set address	0	0 = no change	Use this DMX channel to set address
	001 to 255	1255	DMX address = 1255	from 1 to 255.
CH2	Set address	0	No change	Use this DMX channel to set address
0112	256 to 508	1255	DMX address = 256508	from 256 to 508
		0	No change	
CH3	Static behavior	1	Last DMX value	If no DMX is present the fixture will
0110	Static Deriavior	2	Output off	respond like set in this function.
		3	Load static values	
		0	No change	When dynamic softdim is activated an
		1	Off	extra DMX channel behind the colours
CH4	Soft dim	2	Standard	and/or master controls the soft dim reaction. If fixed no extra DMX channel
		3	Dynamic delay	
		5-255	Fixed delay	is used. Value x delay is x*0.1 seconds, varying from 0.1-25.5 seconds.
	Static output	0	No change	Each output channel can be set to a
		1	Output off	static intensity.
CH10		2255	Intensity 2255	If no DMX is present and Static behavior is set to "load static values". The outputs will be set to the configured intensity values.
CH14	Load default	0	No change	This function resets all settings to the
CE 14	settings	1	Load Factory settings	Factory setting.
		0	No change	The intensity control of the output via
CH17	DMX control	2	Disable	DMX can be disabled. To enable it again use RDM or power cycle with magnet in place. Wait until flash sequence and remove the magnet.





## **ACCESSORIES**

## LIST OF SYMBOLS


#### **ACCESSORIES**

Y110855	CLS 3-phase multi adapter grey XTSA 68
Y110865	CLS 3-phase multi adapter white XTSA 68
Y110875	CLS 3-phase multi adapter black XTSA 68
Y110880	CLS T-connector grey for 3-phaserail, ground left
Y110881	CLS T-connector black for 3-phaserail, ground left
Y110882	CLS T-connector white for 3-phaserail, ground left
Y110925	CLS 3-phase rail 1mtr aluminum XTS 4100
Y110926	CLS Global 3-phase rail 2 metre aluminum XTS 4200
Y110927	CLS Global 3-phase rail 2mtr black XTS 4200
Y110928	CLS Global 3-phase rail 3mtr aluminum XTS 4300
Y110929	CLS Global 3-phase rail 4mtr aluminum XTS 4100
Y110930	CLS Global 3-phase rail 3mtr white XTS 4300
Y110931	CLS Global 3-phase rail 3mtr black XTS 4300
Y110932	CLS Global 3-phase rail 4mtr black XTS 4400
Y110935	CLS end piece for 3-phase rail grey XTS 41
Y110938	CLS end piece for 3-phase rail black XTS 41
Y110939	CLS end piece for 3-phase rail white XTS 41-3
Y110945	CLS connection box for 3-phase rail, grey XTS 11
Y110946	CLS connection box for 3-phase rail, grey XTS 12
Y110950	CLS connection box for 3-phase rail black XTS 11
Y110954	CLS L-connector grey for 3-faserail, ground left

Y110954	CLS L-connector grey for 3-faserail, ground left
Y110955	CLS L-connector grey for 3-faserail, ground right
Y110960	CLS connect piece gray (connect rail-rail) XTS
Y110961	CLS connect piece white (connect rail-rail) XTS21
Y110962	CLS connect piece black (connect rail-rail) XTS
Y110965	CLS hanging bracke for 3-phase rail, grey SKB16
Y110966	CLS hanging set, grey SKB12 with 1.5 mtr steel
Y110970	CLS bending tool XTSV 12
Y110980	CLS round mountingdisk GA70 grey
Y110985	CLS round mountingdisk GA70 white
Y110990	CLS round mountingdisk GA70 black
Y106603-B	CLS Topaz Expo/Zoom Snoot segment 20mm black
Y106603-W	CLS Topaz Expo/Zoom Snoot segment 20mm white
Y106604-B	CLS Topaz Expo/Zoom Barndoor black
Y106604-W	CLS Topaz Expo/Zoom Barndoor black
Y106608	CLS Topaz Zoom Filterholder kit
Y106609	CLS Topaz Zoom Honeycomb kit
Y106610	CLS Topaz Zoom Oval Beam kit
Y106018	CLS Roto Dim magnet
Y106019	CLS Roto DIm magnet with keycord





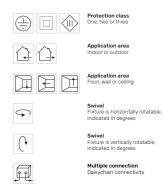

Ö












1		Lenses Availble lenses, indicated in degrees
---	--	--

)	
À	Performance Zoom Adjustable beam angle

( <del>**</del> *)	<b>LEDs</b> Kind of LED used in the fixture

	Plug & play Easy connection using th SmartConnect system
6/0/6	IP value Ingress Protection classif degrees of protection pro

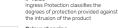







Amber, blue, red or green



















Bluetooth controlled

Warranty 3 or 5 years warranty on

the product

By Casambi



8

CASAMBI

3 3 5 5 5

12

A A A A++





Compose your own fixture

Conformité Européenne

	Energy label	
	of industrial goods within the EL	

