
INDEX

Manual V1.1 - July 2018





SAFETY INFORMATION

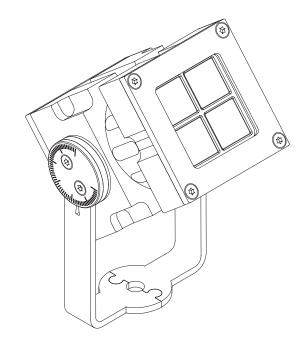









Disconnect the power supply before installing or maintaining


Make sure all connectors are connected properly


Use a source of AC power that complies to local electrical codes Block access below the work area when maintaining the unit Don't modify or install genuine parts on this product

Don't install in a flammable or explosive area

Warning! Some surfaces can be hot


CONTENT

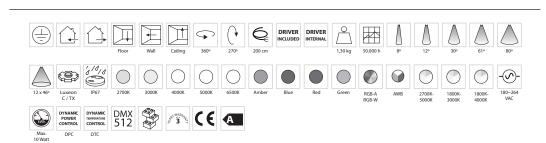

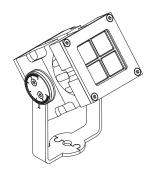



2

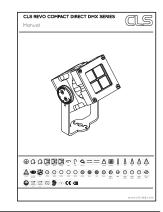









TECHNICAL

INSTALLATION

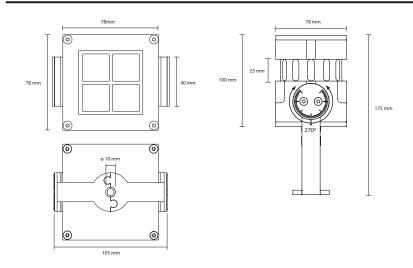

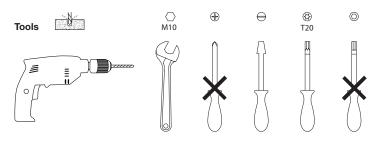

SPECIFICATIONS

ED: Luxeon C / TX

Single colours: 2700K, 3000K, 4000K, 5000K, 6500K,

amber, royal blue and red

Colour changing: RGBA, RGBW, AWB

Tunable white: 2700K-5000K, 1800K-3000K & 1800K-4000K

Lenses: 8°, 12°, 30°, 61°, 80° & 12x46°

Power supply: 180 ~ 264 VAC
Power consumption: Max. 10 Watt
Housing: Anodised aluminum

Weight: 1,3 kg
IP value: IP67
Cable length: 2 meters

Measurements: 175 x 105 x 78 mm (hxwxd)

Ambient temperature: -30° C till +50° C

ACCESSORIES

 110415
 CLS REVO lens kit 8° 8 pcs of lenses

 110425
 CLS REVO lens kit 12° 8 pcs of lenses

 110435
 CLS REVO lens kit 30° 8 pcs of lenses

 110445
 CLS REVO lens kit 61° 8 pcs of lenses


 110455
 CLS REVO lens kit 12x46° 8 pcs of lenses


105069 CLS groundpin black, 20 cm 105070 CLS extension rod black, 20 cm 110705 CLS REVO Wall bracket


122200 CLS D-Ta DMX tester/addresser unit Y110791-G CLS REVO Compact snoot grey Y110791-B CLS REVO Compactsnoot black


Y110776 CLS Power/DMX combi cable outdoor (per meter)
Y110777 CLS Power / DMX combi cable outdoor 100 meters


Y106016 CLS Magnet pin (4 pcs)

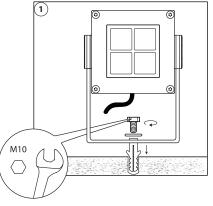

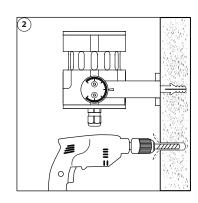

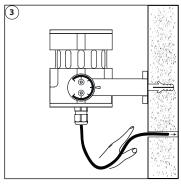

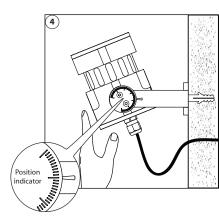


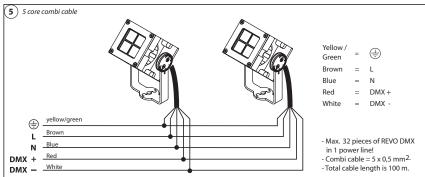






LENS REPLACEMENT


LENS INDEX

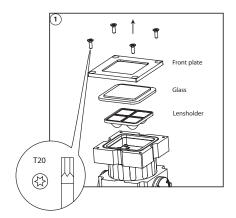

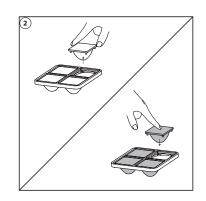

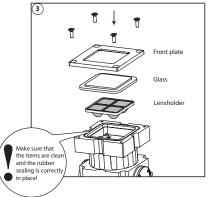

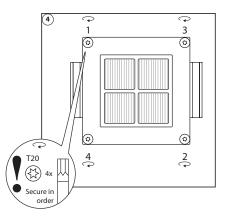

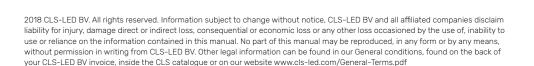














PROGRAMMING

All settings can be configured via DMX. Settings can be configured at once or separately. When one or a couple settings needs to be changed just leave all other setting values zero. This keeps those settings unchanged. Please check the table for more information.

Always use a DMX controller with digital interface. If not available, you can purchase the CLS D-ta DMX addresser unit (#122200).

First make sure to set the DATA on the DMX controller. To program the setting into the LED fixture follow the next steps.

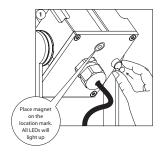





^{*} If all LEDs flash 10 times, something went wrong. Please try again. If the problem continues to occur, please contact your local sales distributor.

FACTORY SETTING TABLE

FACTORY SETTING TABLE													
Row #	Fixture type	Address	Static behavior	Soft dim	Master	Output 1 patch	Output 2 patch	Output 3 patch	Output 4 patch	Static output 1	Static output 2	Static output 3	Static output 4
1	RGBW	1	1	Off	Off	1 (R)	2 (G)	3 (B)	4 (W)	255	255	255	255
2	RGBA	1	1	Off	Off	1 (R)	2 (G)	3 (B)	4 (A)	255	255	255	255
3	AWB	1	1	Off	Off	3 (B)	2 (W)	1 (A)	2 (W)	255	255	255	255
4	1800-3000K	1	1	Off	Off	1 (18)	2 (30)	1(18)	2(30)	255	255	255	255
5	1800-4000K	1	1	Off	Off	1 (18)	2 (40)	1(18)	2(40)	255	255	255	255
6	2700-5000K	1	1	Off	Off	1 (27)	2 (50)	1(27)	2(50)	255	255	255	255
7	Single colour	1	1	Off	Off	1	1	1	1	255	255	255	255





PROGRAMMING TABLE

LIST OF SYMBOLS

			PROGRAMMING T	ABLE				
DMX	Function	Data	Parameters	Description				
	Set address	0	0 = no change	Use this DMX channel to set address from 001 to				
CH1	001 to 255	1255	DMX address = 1255	255. The configured DMX address is called "n"				
6112	Set address	0	no change	Use this DMX channel to set address from 256 to				
CH2	256 to 508	1255	DMX address = 256508	508. The configured DMX address is called "n"				
		0	no change					
CH3	Static	1	last DMX value	If no DMX is present the fixture will respond like				
CH3	behavior	2	output off	set in this function.				
		3	load static values					
		0	no change	Soft dim will interpolate between the DMX				
CH4	Soft dim	1	off	values. This function makes the dim curve smoother				
		2	on					
		0	no change	If master is first channel is selected the channel				
CH5	Master	1	no master used	will be DMX channel "n". If master is last channel is selected the channel will be "n+x"				
CIII	control	2	master is first channel					
		3	master is last channel	("x" is calculated in the output patch).				
		0	no change	Each output channel can be patched to respond				
	Output 1	1	DMX channel n	to the desired DMX channel. This enables the user to mix up the colours according to the				
CH6	patch	2	DMX channel n+1					
	pacer	3	DMX channel n+2	controller that is used.				
		4	DMX channel n+3					
	Output 2 patch	0	no change	Example: all outputs are patched as 1 All outputs will be controlled by DMX channel				
		1	DMX channel n					
CH7		2	DMX channel n+1	"n". If master is used total DMX channels will be 2				
		3	DMX channel n+2	otherwise it uses 1 channel ("x" = 1).				
		4	DMX channel n+3					
		0	no change	Example: output 1&2 are patched as 1 and 3&4 are patched as 2 Output 1&2 will be controlled by DMX channel "n". Output 3&4 will be controlled by DMX channel "n+1".				
	Output 3	1	DMX channel n					
CH8	patch	2	DMX channel n+1					
		3	DMX channel n+2					
		4	DMX channel n+3					
		0	no change	If master is used total DMX channels will be 3				
0110	Output 4	2	DMX channel n	otherwise it uses 2 channels ("x" = 2).				
CH9	patch	_	DMX channel n+1					
		3	DMX channel n+2					
		0	DMX channel n+3					
CH10	Static output	1	no change	Each output channel can be set to an static				
	1		output off	intensity.				
		2255	intensity 2255 no change	If no DMX is present and Static behavior is set to "load static values". The outputs will be set to the				
CH11	Static output 2	1	output off					
		2255	intensity 2255	configured intensity values.				
	Static output	0	no change	compared intensity values.				
CH12		1	output off					
CITIZ	3	2255	intensity 2255					
		0	no change					
CH13	Static output	1	output off					
0.113	4	2255	intensity 2255					
		0	no change					
CH14	Load default		Load Factory settings. X is row	This function resets all settings to the Factory setting. Check Factory setting table.				
	settings	Х	number factory setting table.					

7







Colour changing RGB, RGB-W, RGB-A, AWB or Tunable White

CITIZEN XICATO

Lightsource

Equipped with a CLS, Citizen or a Xicato LED module